



Product Manual



www.ingalcivil.co.nz







NCHRP350 COMPLIANT & NZTA APPROVED

1.0 Introduction

The ET2000 Plus guardrail extruder terminal is engineered to absorb the kinetic energy of an impacting vehicle at a controlled rate, providing a soft ride-down for vehicle occupants.

Unlike traditional flared guardrail terminals, the ET2000 Plus is a tangential end treatment that is installed on a straight alignment. The use of an ET2000 Plus provides an end treatment solution for applications where there is insufficient space for a flared end terminal or when it is cost prohibitive to place an embankment for a flared terminal.

The ET2000 Plus is available in two sizes. The compact 7.62m TL2 terminal is an economical solution where the posted speed is less than or equal to 70km/h. The standard 15.24m TL3 terminal is acceptable for all posted speeds greater than 70km/h.

2.0 Functionality

Upon impact, the extruder head travels horizontally along the guardrail beams, flattening the w profile of the beam and extruding the flattened section away from the traffic face. It is this action that absorbs the kinetic energy of the impacting vehicle.

The guardrail beams are supported by specially engineered Steel Yielding Terminal (SYT) posts that are designed to yield when the terminal is impacted end-on, and provide redirection for side-on impacts.

3.0 Crash Test Details

The ET2000 Plus has been crash tested and assessed in accordance with Test Level 2 (TL2) and Test Level 3 (TL3) of the National Cooperative Highway Research Program (NCHRP) Report 350.

Product acceptance details are available upon request from your local Ingal representative. Acceptance of product variants should be confirmed prior to installation.

4.0 Specifications

4.1 Material:

Guardrail Beams: STY Posts: Blocking Pieces: Delineation:

Grade 350MPa ASTM A36 Composite HDPE / crumb rubber Class 1A reflective sheeting

All steel components are hot dip galvanized in accordance with AS/NZS 4680.

4.2 System Dimensions:

TL2 Terminal:	7.62m overall length
TL3 Terminal:	15.24m overall length
SYT Post Spacing:	1,905mm
Point of Need:	Post 3

4.3 Packaging:

The ET2000 Plus is available packaged as individual units to facilitate rapid installation and minimise disruption to traffic.

TL2 Package Mass: 330kg TL3 Package Mass: 540kg







5.0 Installation

Only items provided by Ingal are to be used for the installation of the ET2000 Plus. The following written instructions are to be read in conjunction with Ingal's drawings. A generic Safe Work Method Statement is available upon request for installation operations.

5.1 Site Preparation.

The site should be prepared free of obstructing vegetation and other hazards that may interfere with the installation or operational performance of the system. This includes kerbs below the system and other hazards that may hinder the extruder head as it travels horizontally along the guardrail beams. Some sites may require minor grading if installed beyond the edge of the pavement shoulder.

Impacts occurring prior to the location of the 3rd post (point of need) may allow the vehicle to pass behind the barrier system. Therefore, the area immediately behind the terminal should be reasonably traversable and free from fixed object hazards. If a clear run-out is not possible, this area should be similar in character to adjacent unshielded roadside areas.

Since the terminal functions by extruding rail away from the traffic face, a risk assessment is recommended if pedestrians and/or cyclists will be accessing the area behind the terminal.

5.2 Set-Out

When the downstream guardrail system is installed parallel to the edge of the roadway without any offset, a 25:1 or flatter flare over the length of the ET2000 Plus may be used to locate the extruder head away from the roadway.

When the ET2000 Plus is installed at the end of guardrail following a curved alignment, the following should be adopted for the layout of the terminal. For both conditions, the ET2000 Plus must be straight over the length of the system. All offsets are measured to the face of the rail.

Outside of the Curve. The ET2000 Plus is to be installed with a maximum offset of 610mm from the curve.

Inside of the Curve. For a curve radius of 300m or less, the ET2000 Plus is to be installed with a maximum offset of 305mm from the curve. For a curve radius greater than 300m, the ET2000 Plus is to be installed with a maximum offset of 610mm from the curve.

When establishing the post locations of the terminal, take care to note the following;

- The first two posts from the end of the terminal have no offset blocking piece;
- The 200mm offset block used in the terminal is wider than conventional w-beam offset blocking pieces.







5.3 Installing the HBA Bottom Post

The first post of the ET2000 Plus is a Hinged Breakaway (HBA) post that comprises a top and bottom halve. Installation commences by first installing the bottom half of the post as an individual item. This may be achieved by

- Driving the bottom post with an approved driving head to the appropriate depth, approximately 1,800mm
- or
- Auguring a 300mm diameter pilot hole approximately 1,800mm deep and force the HBA post to the appropriate depth by impact or vibratory means with an approved driving head after compaction. Backfill material shall be placed in 150mm lifts and compacted with pneumatic equipment or heavy hand tampering equipment for optimal compaction.

If rock is encountered when installing the HBA bottom post, use either of the following procedures unless there is a more restrictive Regulatory Authority specification that should be followed:

- If rock is encountered with less than 500mm required to complete the installation of the HBA bottom post to full depth, drill a 300mm diameter hole in the rock to the depth required to install the HBA bottom post to full depth. Backfill and compact the hole in accordance with Section 5.6.
- If rock is encountered and more than 500mm is required to install the HBA bottom post to full depth, drill a 300mm diameter hole 560mm deep into the rock. Install the HBA bottom post in the hole, cutting off the bottom of the HBA bottom post so that its top is at the correct elevation for proper installation. Backfill and compact the hole in accordance with Section 5.6.

Care must be taken to ensure the HBA bottom post is installed perpendicular to the finished ground level. Once installed the HBA bottom post should not protrude more than 100mm above the ground line.

5.4 Installing the HBA Top Post

- Install the HBA top post by aligning the holes of the ears on the HBA top and bottom posts. Refer to Figure 1 for the correct orientation
- In the 11mm diameter holes, install 3/8" (10mm) diameter x 2" (50mm) hex head bolt (C1625) with a 3/8" (10mm) washer (C1620) and secure with a 3/8" (10mm) lock washer (C1622) and 3/8" (10mm) hex nut (C1626). The bolts should be installed so that the nuts are on the inside of the ears
- In the 21mm diameter holes, install a ." (20mm) diameter x 2." (63mm) hex head high strength bolt (C1619) with a ." (20mm) washer (C1617) and secure with a ." (20mm) lock washer (C1624) and ." (20mm) hex nut (C1618). There is no torque requirement for these bolts. They should be tightened to a snug position. Do not install the bolt on the shoulder side until the strut is ready to be installed.

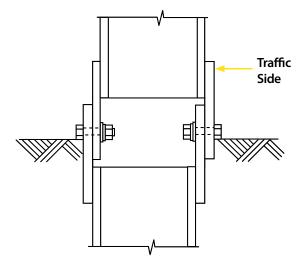


Figure 1: Orientation of HBA Post

The HBA Top Post must be installed perpendicular to the finished ground level. ($\pm 1^{\circ}$ or 15mm angular displacement at top of post).

5.5 Installing the SYT Posts

The SYT posts may be installed by using any of the following methods:

- Driving the posts with an approved driving head to the appropriate elevation, 730mm ± 20mm. Note there is little tolerance in relative height of posts to one another. Care in setting the posts to the same height will facilitate a quicker installation.
- or
- Auguring a 300mm diameter pilot hole approximately 1,100mm deep. Backfill native material shall be placed in 150mm lifts and compacted with pneumatic equipment or heavy hand tampering equipment for optimal compaction. Force the SYT post into backfilled hole to an appropriate depth by impact or vibratory means with an approved driving head.
- If rock is encountered, drill a 300mm diameter hole in the rock to the depth required to install the SYT post to full depth. Backfill and compact the hole. The material removed from the hole may be used for the backfill.

5.6 Backfill of Posts in Excavated Rock Holes

Native materials may be used for backfilling in overlying soil. Backfill material in excavated rock hole should be compliant to ASTM C33 coarse aggregate size number 57 – reference Table 1.

Table 1: Grading Requirements for Coarse Aggregate										
Size	Amounts finer than each laboratory sieve (square - openings), mass percent									
No.	37.5mm	25.0mm	12.5mm	4.75mm	2.36mm					
57	100	95 to 100	25 to 60	0 to 10	0 to 5					



Backfill material shall be placed and compacted to 95% maximum dry density in 150mm lifts. When the top of the drilled hole is not at the surface, the soil above the drilled hole should consist of native soil re-compacted to existing specifications. The post should be driven into the backfilled hole after compaction.

5.7 Installing the Angle Strut

- Place the angle iron strut (C1798G) between post 1 (HBA post) and post 2 (first SYT post).
- Attach the strut to post 1 (HBA post) with a ¾" (20mm) diameter x 2½" (63mm) hex head high strength bolt (C1619) with a ¾" (20mm) washer (C1617) and secure with a ¾" (20mm) lock washer (C1624) and ¾" (20mm) hex nut (C1618). Install so that the nut is on the inside of the ears.
- Attach the strut to post 2 (first SYT post) with 2 off 7/16" (11mm) diameter x 1½" (38mm) hex head bolts (C1629) with 2 off 7/16" (11mm) washers (C1628) and secure with 2 off 7/16" (11mm) lock washer (C1630) and 7/16" (11mm) hex nut (C1627). Install so that the nut is on the inside of the flange

There is no torque requirement for any of these bolts. They should be tightened to a snug position.



5.8 Installing Blocking Pieces and Rails

- Place the 190mm plastic King Block (C1797) on posts 3 through 8.
- Select 3 off 3.81m rail panels (C1355G) and 1 off 3.81m anchor rail (C1811G). The anchor rail should be orientated with the anchor bracket holes closest to the terminal end.
- At posts 3 through 8, bolt rail panels with the correct lap orientation with a 5/8" (16mm) diameter x 10" (255mm) long mushroom head post bolt. A 5/8"(16mm) diameter round washer (C1631) and a 5/8"(16mm) hex nut (C1632) secures the rail and block to the post. The washer is located between the post and the nut. See Figure 2.


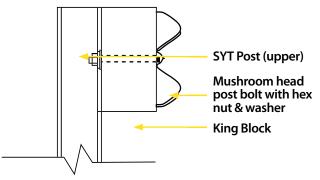


Figure 2: Attachment of King Block

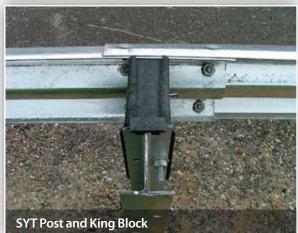- The W-beam rails can be lapped so that the exposed ends face away from near-side approaching traffic.
- At post 2, bolt the rail panel directly to the SYT post with a 16mm diameter x 32mm long mushroom head post bolt (C1550) and a 16mm washer (C1631) and hex nut (C1520). The washer is located between the post and the nut. No post bolt is used at post 1.
- Splice the 3.81m rail panels together with eight 16mm diameter x 32mm long mushroom head splice bolts (C1550) and hex nuts (C1520).









5.9 Installing the Cable Anchor Assembly

- The cable anchor fitting (C1813G) is secured to the anchor rail panel (C1811G) by inserting the protruding hooks into the slots in the rail. It is locked into place by pulling the bracket towards the terminal end.
- Slide one end of the cable (C1162) into the cable anchor fitting (C1813G) and the other end through post 1 (HBA post). Secure the cable to the anchor fitting with a 1" (25mm) washer and 1" (25mm) hex nuts.
- Place the bearing plate (C1479G) with the 125mm dimension up and the 75mm dimension down. Secure the cable with a 1" (25mm) washer and 1" (25mm) hex nut
- Restrain the cable with vice grips at the end being tightened to avoid twisting the cable. Make sure the nuts are tight and the cable is tightened to a tension of 50Nm.





5.10 Installing the Extruder Head

The final piece to attach is the extruder head:

 Place the extruder head (C1812G) over the end of the anchor rail panel (C1811G). The extruder head can be used on the left hand or right hand shoulder. Be sure that the extruder is orientated with the exit slot on the rear side of the guardrail system, so that the guardrail is extruded away from traffic.

- The extruder head should be pushed along the anchor rail panel as far as it will go. Centre the rail in the tail of the extruder.
- The top and bottom attachment brackets of the extruder head each have three holes to provide tolerance in the installation. Choose the hole in the attachment bracket that is closest to the predrilled hole in the post to allow the extruder head be parallel with the W-Beam rail. Secure the extruder head with a 3/8" (10mm) diameter x 11/2 (38mm) hex head bolt (C1623) and a 3/8" (10mm) washer (C1620) and lock washer (C1621) between the 3/8" (10mm) nut (C1626) and the post at the top and bottom attachment brackets
- If not already fixed, attach regulatory authority approved reflective/chevron sheeting (specifications differ in each state) to the face of the extruder head. Note the orientation of the reflective/chevron sheeting may depend on what side of the road the terminal is installed relative to.



5.11 Installation of the TL2 ET2000 Plus

The installation of the TL2 system follows that of the longer TL3 system however, the following needs to be observed:

• The system comprises of 1 off HBA post assembly and 3 off SYT posts



ET2000 Plus Installation Checklist

Customer:		
Project:		
Barrier ID:		
Terminal Type: TL2 TL3		
Checked By:		
Signed:		
Date		
Have the SYT posts been positioned every 1,905mm	Yes	No
Does the bottom half of post 1 (HBA) protrude not more than 100mm above ground level	Yes	No
Are all bolts securing the top to the bottom of the HBA post tight	Yes	No
Are the SYT posts at the correct height of 730mm \pm 20mm above ground level	Yes	No
Is the extruder head pushed to its maximum along the anchor rail	Yes	No
Is the extruder head correctly orientated with the exit slot facing the rear of the guardrail system	Yes	No
Is the area below the guardrails free from hazards so that the extruder head can travel freely upon impact	Yes	No
Is the extruder head properly secured to post 1 through the attachment brackets	Yes	No
Has delineation been attached to the extruder head	Yes	No
Have the rails been secured to posts 2 through 8 (posts 2 through 4 for the TL2 system)	Yes	No
Have the rails been spliced with M16x32mm mushroom head bolts	Yes	No
Are all splice bolts and post bolts snug tight	Yes	No
Is the fill material around each post suitably compacted	Yes	No
Is the anchor cable secured between the anchor rail and post 1	Yes	No
Is the bearing plate correctly orientated	Yes	No
Is the cable tensioned to 50Nm	Yes	No
Has any minor damage been repaired using two coats of an organic zinc rich paint	Yes	No
Does the terminal form a smooth line vertically and horizontally when viewed along the system	Yes	No
Surface Mount Variant		
Has the appropriate footing been used to support the terminal, as per CAB-STD-127 or 128	Yes	No
Are all anchors installed correctly without excessive bolt extending above the nut	Yes	No
Are all anchor nuts snug tight	Yes	No

Note: If the ET2000 terminal has been involved in an end-on impact, the extruder head shall be replaced.





6.0 Attachments

The ET2000 Plus has been assessed through full scale crash testing. The attachment of items, such as motorcycle rub rails or handrails may alter the functionality of the terminal as a guardrail end treatment. Only items sanctioned by Ingal are to be attached to the ET2000 Plus.

6.1 Extruder Head Cover

Manufactured from UV stabilised Polyethylene, the extruder cover provides protection for vulnerable road users. The cover slides over the extruder head and can be secured with tek screws along the sides. Retroflective/ Chevron sheeting is attached directly to the face of the cover.





Extruder Head with Cover - Front View



6.2 Motorcyclist Protection Shield

A side impact protection shield for motorcylist protection is also available, this shield is designed to help reduce the risk of vulnerable road users snagging on the extruder head when impacting from the reverse direction. Refer drawing CAB-STD-136 for installation detail.

7.0 Maintenance

Except for repairs due to impacts, there is virtually no maintenance required for the system. It is recommended that annual inspections be performed to ensure the following;

- The terminal is appropriately delineated.
- Debris has not accumulated around the terminal that may impede the travel of the extruder head.
- The anchor cable is taut and the nuts have not been removed from the cable.
- The blocking pieces have not rotated.

7.1 Bush Fire Damage

All steel items used for the assembly of the ET2000 Plus are hot dip galvanized. The performance of galvanized coatings when subjected to fires depends upon a number of factors, such as flame duration, intensity and the characteristics of the galvanized coating.

Typical bushfire conditions may expose steel structures to an air temperature of 800°C for periods of up to 120 seconds, however zinc coatings are generally reflective and will not absorb heat at the same rate as an uncoated steel surface. Depending on the section thickness of the steel, the actual steel surface temperature may not exceed 350°C.

Typically, the bushfire flame duration and intensity are not high enough to compromise the structural strength of the steel. The hot dip galvanized coating will also typically remain unaffected through a bushfire event. If the bushfire causes damage to the galvanized surface, then the item(s) shall be replaced.

If an item to be replaced is a post or rail, it is recommended that the blocking pieces be replaced at these locations.

7.2 Damage Assessment

In the event of a vehicle impact, damage to the terminal is to be assessed in accordance with Table 2.

A Safe Work Method Statement is available upon request to assist in the safe repair of the ET2000 Plus.

Only items purchased from Ingal shall be used for the repair of the ET2000 Plus.

When replacing posts, ensure that the disturbed foundation material is suitably compacted prior to the installation of replacement posts.

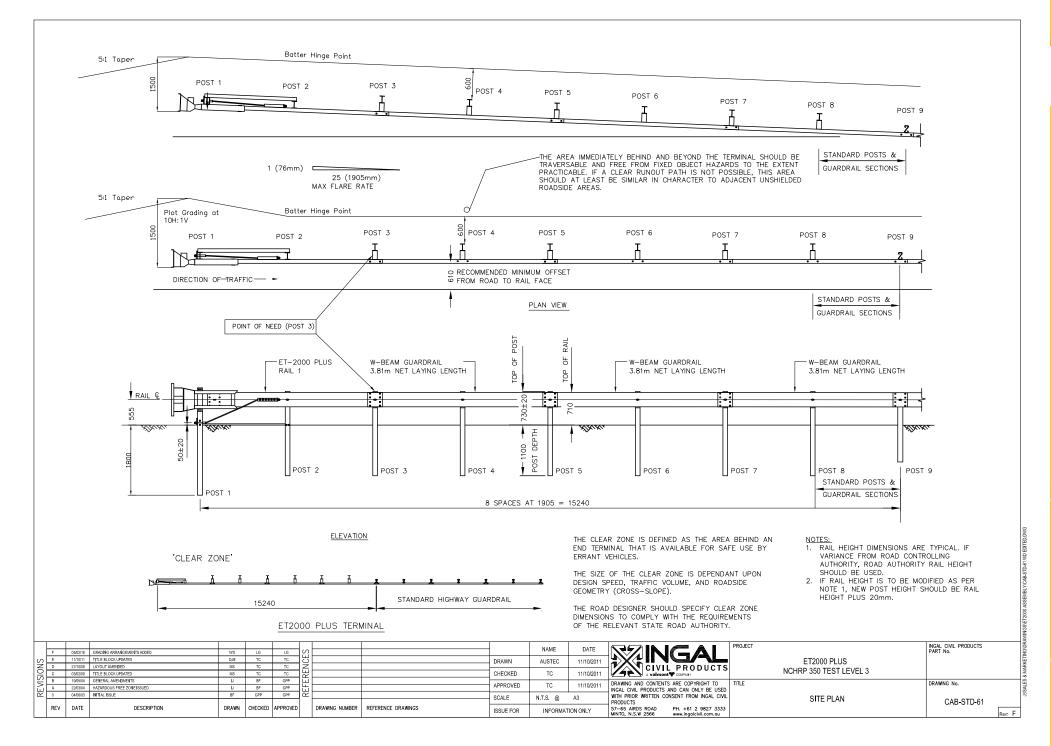


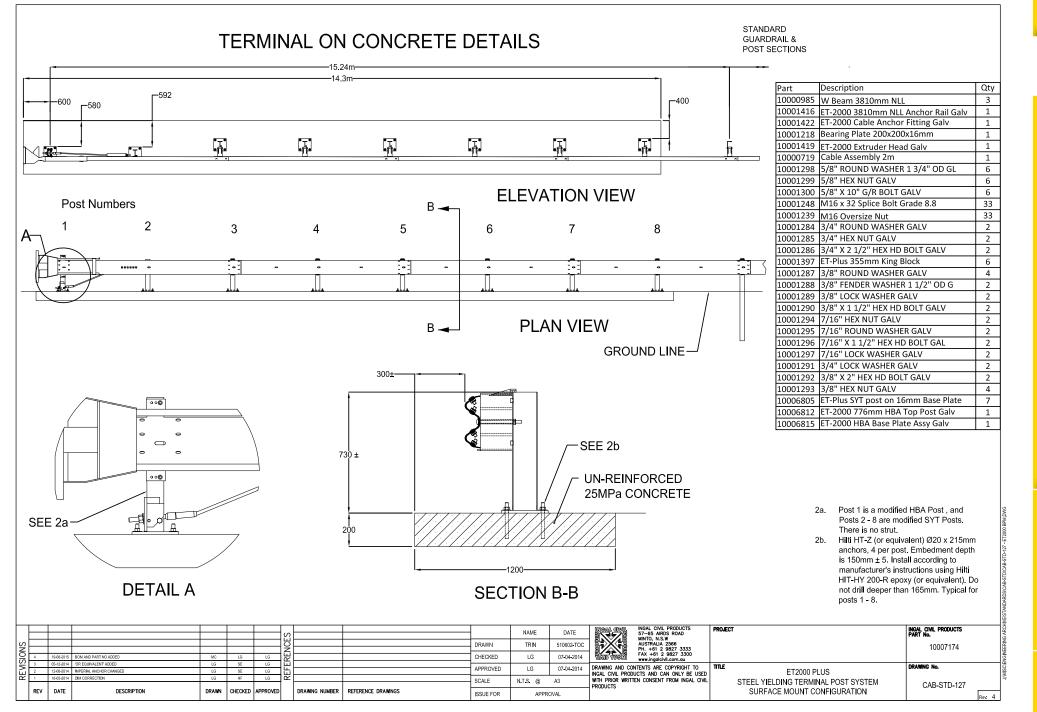



Table 2: Damage Assessment of ET2000

_		
Type of Defect	Description of the Defect	Action to be Taken
Galvanizing damage on Posts.	The sum total of the damaged area does not exceed 45cm ² (0.5% of the total surface area) and no individual damaged area exceeds 40cm ² . The sum total of the damaged area exceeds 45cm ² (0.5% of the total surface area) or	An organic zinc rich epoxy paint is to be applied to the repair area in two coats. The post is to be replaced.
	an individual damaged area exceeds 40cm ² .	
Galvanizing damage on rails.	The sum total of the damaged area does not exceed 200cm ² (0.5% of the total surface area) and no individual damaged area does not exceed 40cm ² .	An organic zinc rich epoxy paint is to be applied to the repair area in two coats.
	The sum total of the damaged area exceeds 200cm ² (0.5% of the total surface area) and/or an individual damaged area exceeds 40cm ² .	The rail is to be replaced.
Mechanical damage on blocking pieces	The blocking piece has chips or cracks.	The blocking piece is to be replaced.
Mechanical damage on SYT posts.	The post is bent.	The post is to be replaced.
Mechanical damage on extruder head	The extruder head has minor damage that will not prevent its travel along the rail.	The extruder head may be reused.
	The extruder head is bent which will prevent its travel along the rail. The delineation tape is damaged.	The extruder head is to be replaced. The delineation tape is to be replaced.
Mechanical damage	The rail is dented, twisted or flattened.	The rail is to be replaced.
on rail.	There are nicks in any part of the rail.	The rail is to be replaced.
	The slots in the rail are distorted.	The rail is to be replaced.
Mechanical damage on bolts.	The body of the bolt is distorted.	The bolt is to be replaced.
UT DUILS.	The thread of the bolt is damaged.	The bolt is to be replaced.
Disturbance of material around posts.	The material around the post is loose or uncompacted.	Any disturbed pavement or material around a post shall be left dense, tight and smooth so that resistance to wate penetration is similar to that of the adjacent surface.

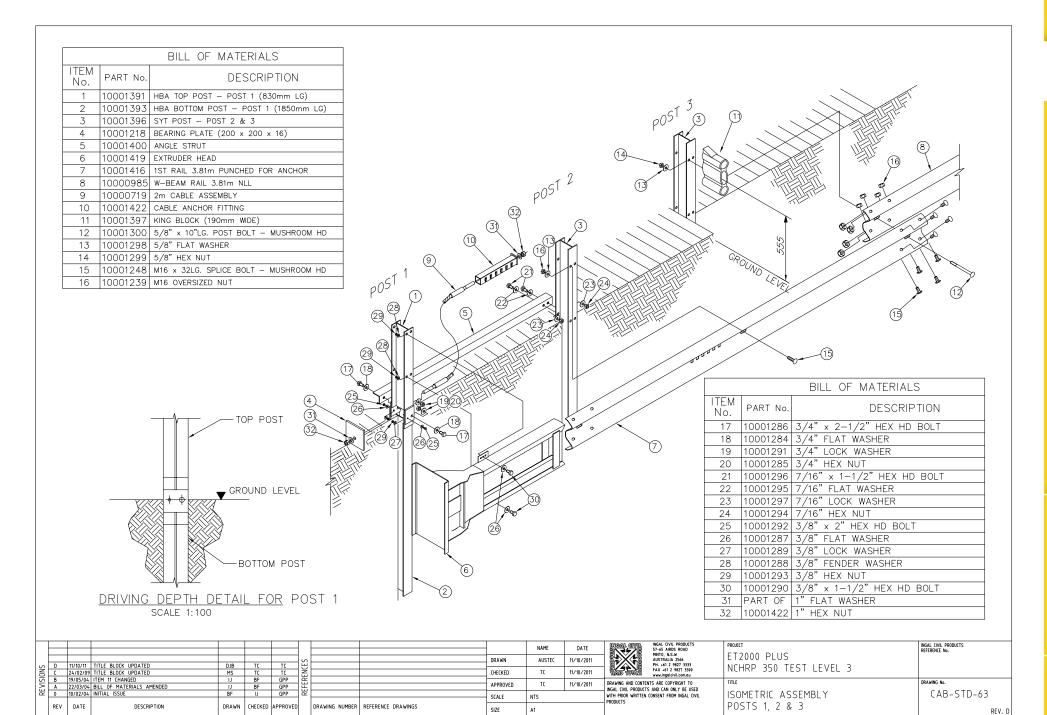Note: If the ET2000 terminal has been involved in an end-on impact, the extruder head shall be replaced.







BILL OF MATERIALS										
ITEM No.	PART No.	DESCRIPTION								
3	1001396	SYT POST - POST 4, 5, 6, 7 & 8 (1830mm LG)								
8	10000985	W-BEAM RAIL 3.81m NLL								
11	10001397	KING BLOCK (190mm WIDE)								
12	10001300	5/8" x 10"LG. POST BOLT - MUSHROOM HD								
13	10001298	5/8" FLAT WASHER								
14	10001299	5/8" HEX NUT								
15	10001248	M16 x 32LG. SPLICE BOLT - MUSHROOM HD								
16	10001239	M16 OVERSIZED NUT								

р05¹

(14)

(13

											NAME	DATE	IDIGAL CIVIL INGAL CIVIL PRODUCTS 57-65 AIRDS ROAD		INGAL CIVIL PRODUCTS REFERENCE No.
							JvF			DRAWN	AUSTEC	11/10/2011	AUSTRALIA 2566	ET2000 PLUS	
10	D	11/10/11	TITLE BLOCK UPDATED	DJB	TC	TC	8						PH. •61 2 9827 3333	NCHRP 350 TEST LEVEL 3	
18			TITLE BLOCK UPDATED	MS	TC	TC] Ä [CHECKED	TC	11/10/2011	TUADO TOPOLO FAX +61 2 9827 3300		
2			ITEM 11 CHANGED	IJ	BF	GPP	1 🕾 L				70	44 /40 /2004	DRAWING AND CONTENTS ARE COPYRIGHT TO	TITLE	DRAWING No.
	A	22/03/04	BILL OF MATERIALS AMENDED	IJ	BF	GPP				APPROVED	ii.		INGAL CIVIL DOODUCTS AND CAN ONLY BE LISED		
122	0	10/02/04	INITIAL ISSUE	BF	IJ	GPP	726			SCALE	NTS		WITH PRIOR WRITTEN CONSENT FROM INGAL CIVIL	ISOMETRIC ASSEMBLY	CAB-STD-64
										JUALE	CIN		DOODUSTS.		
	REV	DATE	DESCRIPTION	DRAWN	CHECKED	APPROVED		DRAWING NUMBER	REFERENCE DRAWINGS	SIZE	A1			POSTS 4, 5, 6, 7 & 8	REV. D

(15)

005^{1 6}

(14

ø

-12

~

Р⁰⁵⁷

8

ROUND

(14

(12)

P051 8

L

00S

8

12

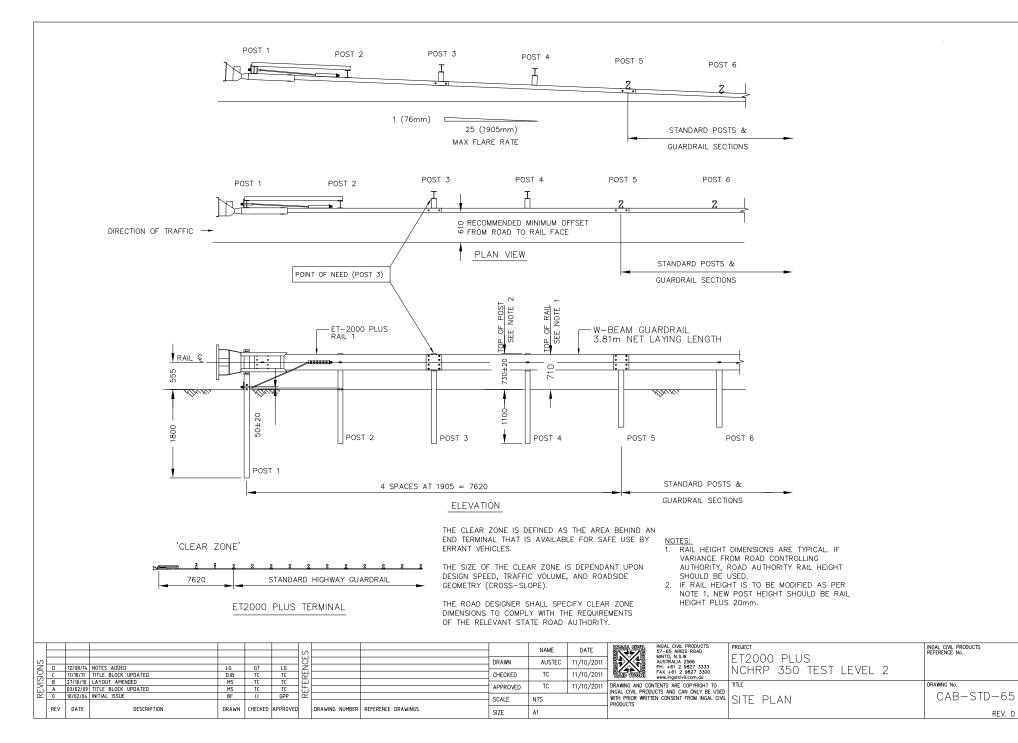
ð

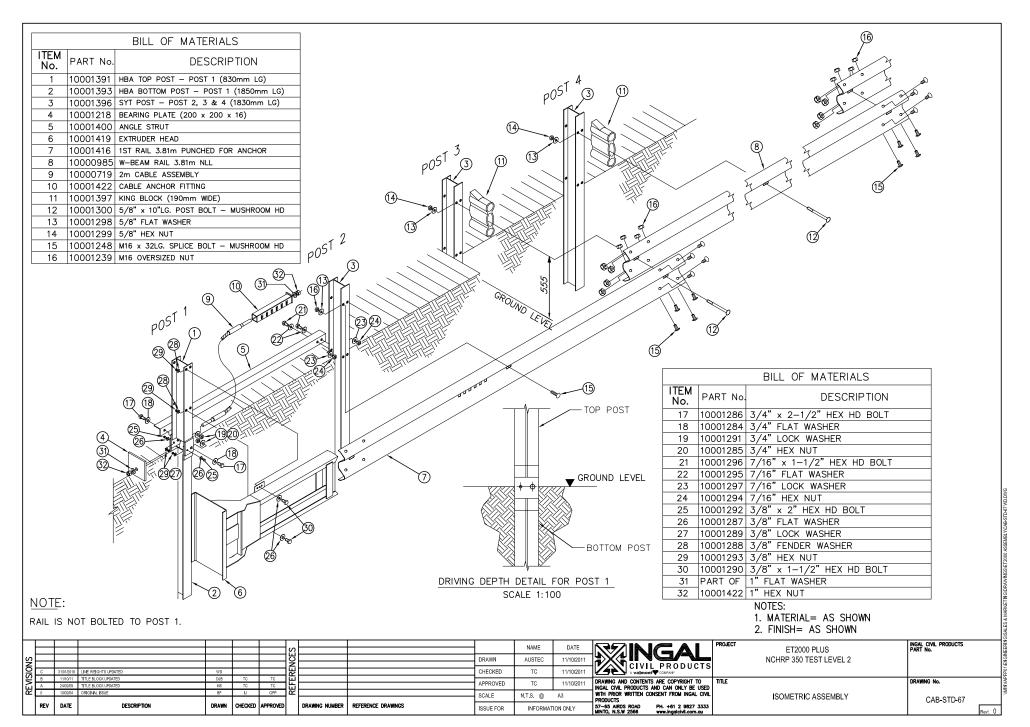
16 **o**

-12

⊳-

(14









For more information

contact us on the web www.ingalcivil.co.nz

Auckland

40 Tironui Road, Takanini Auckland 2112 New Zealand Ph: 0212 464 997 Email: sedwards@ingalcivil.co.nz

Head Office: Sydney

57-65 Airds Road, Minto, NSW 2566 Ph: +61 2 9827 3333 Fax: +61 2 9827 3300 Free call (within Australia): 1800 803 795 Email: sales@ingalcivil.com.au