

Flexfence

Wire Rope Safety Barrier

Product Manual



Release 04/21
Flexfence is licensed to Ingal Civil Products by Blue Systems Inc. of Sweder

www.ingalcivil.com.au



1.0 Introduction

The superior design and clean lines of Flexfence Wire Rope Safety Barrier (WRSB) has seen it become the road safety industry's preferred wire rope barrier. Flexfence has gained popularity as a median barrier for the prevention of crossmedian accidents. Cross-median accidents are typically violent collisions with a high probability of multiple serious injuries and death. Thus, the design trend is towards providing positive vehicle containment in wider median applications for which barriers have not historically been warranted.

The straight alignment of the ropes allows for easy installation and tensioning. Post footings are typically concrete with a sleeve to form a recess. Once the anchors and footings are poured, the ropes are cut to length, stainless steel end fittings are machine swaged and the ropes are tensioned.

The Flexfence system has configurations that are compliant with NCHRP-350 Test Level 3 and TL4. With the transition to MASH compliant highway safety products across most Australian jurisdictions, please check with your local road authority for it's current status. In jurisdictions where Flexfence has moved to Legacy status, it has been replaced with MashFlex, our MASH compliant WRSB system. An upgrade kit is available for existing runs of Flexfence to bring them up to a MASH compliant level, refer drawing WR-STD-89.

2.0 Configurations

2.1 Flexfence TL3

Flexfence TL3 is a 4-rope barrier assessed in accordance with NCHRP Report 350 Test Level 3 (TL3). The TL3 heavy vehicle impact is performed with a 2,000kg pick-up truck travelling at 100km/h and 25°.

In addition, Flexfence TL3 has been evaluated to the requirements of containment classes N2 and H1 as

per the European EN1317-2 specification. This requires impacts with a 10,000kg rigid truck travelling at 70km/h and 15° (H1) and a 1,500kg passenger car travelling at 110km/h and 20° (N2).

2.2 Flexfence TL4

Flexfence TL4 is available as a 3-rope or 4-rope barrier and has been assessed in accordance with NCHRP Report 350 Test Level 4 (TL4).

The TL4 configuration requires the addition of a post stiffener plate and top rope hook. All other components are identical to the TL3 configuration. The 3 rope configuration is achieved by removing the 2nd from bottom cable.

The TL4 heavy vehicle impacts are performed with a 2,000kg pick-up truck travelling at 100km/h and 25° and an 8,000kg rigid truck travelling at 80km/h and 15°.

3.0 Specification

Material:

Steel Wire Rope: Mass – 1.21kg/m

Ultimate Tensile Strength - 165.5kN

Sigma Posts: Material to AS/NZS 1594
Anchor Bracket: Material to AS/NZS 1594
Swage Fittings: Stainless Steel, Grade 304
Plastic Parts: UV Stabilised Polypropylene

Finish:

Steel Wire Rope: Galvanised coating

Sigma Posts: Galvanised to AS/NZS 4680 Anchor Bracket: Galvanised to AS/NZS 4680

Dimensions:

Steel Wire Rope: Right Hand Lay, Ø19mm, 3 strands,

7 wires each $(1 \times 3.15 \text{mm} + 6 \times 3.0 \text{mm})$

Sigma Posts: 1230mm long

Cable Heights:

Top: 720mm 2nd from Top: 640mm 2nd from Bottom: 560mm Bottom: 480mm





4.0 Technical Data

4.1 Flexfence Performance

Wire rope safety barriers are classified as flexible barriers and consideration must be given to the expected movement of the barrier when impacted.

The design of a WRSB should include an assessment of the mass of the impacting vehicle, its speed and angle of impact. Whilst rigorous crash testing is undertaken to evaluate the performance of roadside barriers, the deflection results obtained during testing should not be considered an exact distance, but rather as a single point within the range of deflections that can be expected.

4.2 Working Width

The working width is the maximum width that is required to prevent an impacting vehicle from colliding with an object behind a road safety barrier system. This includes the dynamic deflection and the extra width due to the roll of an impacting vehicle. The roll of a vehicle is an important consideration in shielding a fixed object hazard such as a utility pole or bridge support.

4.3 Dynamic Deflection

The dynamic deflection is defined as the largest transverse deflection of a road safety barrier system recorded during an actual crash or during a full-scale impact test.

If the available space between the hazard and the barrier is not adequate, then the barrier can be stiffened in advance of, and alongside the hazard by reducing the post spacing. Other factors that can have an influence on the deflection of the barrier include tension in the wire rope cables, horizontal curvature and installation length.

Flexfence crash test deflection results are listed on the Ingal drawings.

4.4 Footing Selection

The post footing provides lateral support to the post during impact ensuring the post yields by bending near ground level. The type and size of footing is dependant upon the surrounding soil type and distance to the embankment rounding point.

Table 1 provides guidelines for the construction of post footings for varying site conditions.

Table 1: Post Footing Selection Guide											
Centre of Post Footing to	Standa	rd Soil	Weak Soil								
Rounding Point	Dia	Depth	Dia	Depth							
Less than 0.5m	300	600	300	750							
Greater than 0.5m	300	600	300	600							

The minimum concrete compressive strength at 28 days is 25Mpa.

If using the Driven Sleeve footing option, please refer drawing WR-STD-86 and your local Road Controlling Authority acceptance conditions prior to design or installation.

In the event that the soil type cannot be verified, then a post pull-over test can be conducted to validate the structural capacity of the footing.

A pull-over test is conducted by applying a load to the top of the post whilst positioned in the proposed footing design. The footing is required to remain stable until the post yields. Once the post yields, the footing has been subjected to its maximum potential load.

4.5 Minimum Length

The recommended minimum length-of need for a Flexfence installation is 40m.

4.6 Maximum Length

The recommended maximum run length of a Flexfence installation is 1200m.

4.7 Point-of-Need

Flexfence is designed to contain and redirect errant vehicles away from road side hazards. The location along the barrier system that redirection occurs is known as the point-of-need.

The point-of need for both the Flexfence TL3 and TL4 configurations is 12.6m from the anchor point when using the TL3 End Terminal.

5.0 End Terminals

End terminals are used to anchor the system and provide a soft gating impact to prevent vehicles from launching or snagging upon impact with Flexfence.

5.1 TL3 Terminal

The TL3 Terminal has been crash tested to meet the requirements of NCHRP Report 350 TL3. It can be used on all new installations or retrofitted to existing Flexfence installations.

The TL3 Terminal gradually tapers the cables from full height to an anchor bracket located at ground level.

The TL3 Terminal has demonstrated an ability to provide a soft, gating impact without releasing the cables from the anchor point. This non-release feature allows the system to remain anchored following design impacts.

This important feature contrasts terminals that are designed to release the cables for end-on impacts. Once these terminals release the cables their ability to provide continued containment and redirection for errant vehicles is compromised.

5.2 Standard Terminal

The Standard Terminal is designed to provide the necessary tensile support to redirect errant vehicles that impact the wire rope barrier within the length-of-need section.

5.3 TL3 Terminal - Workzone Applications

If used in a temporary workzone, the hazard free area is to be 30m from anchor point, with a width of 6m running parallel with the system.





6.0 Installation

The following written instructions should be read in conjunction with Ingal Civil Products' drawings.

A Safe Work Method Statement is available upon request to assist in the safe assembly of Flexfence.

Tooling and equipment is provided by Ingal for the installation of Flexfence. This equipment is known as the Flexfence Tension Unit and Flexfence Swaging Unit. Please contact your nearest Ingal representative for the safe operating instructions for this equipment.

6.1 Site Preparation

501-1000

The approach terrain to the barrier should be level, otherwise a maximum grading of 1V:10H is permitted. Steeper slopes may result in the vehicle impacting the barrier at other than the design height.

6.2 Horizontal and Vertical Alignment Criteria

The length and/or horizontal curvature of an installation of wire rope barrier may increase the dynamic deflection of the barrier. In addition, horizontal curves may place more lateral load on the post foundations. To calculate the effect of a curve on the deflection, multiply the deflections as detailed on the system arrangement drawings by the curve correction factor in Table 2, the length column is the total length of the run. These correction factors only apply to convex curves.

The minimum allowable sag vertical curve for wire rope barriers is \geq 30m. (K = length of VC in metres divided by the change in grade expressed as a percentage). There is no K value limit for crest curves.

Table 2: Length and Co	Table 2: Length and Curve Correction Factors													
Longth (m)	Convex Curve Radius (m)													
Length (m)	150-299	300-449	450-749	750+										
0-100	1.4	1.3	1.1	1.0										
101-200	1.6	1.4	1.2	1.1										
201-300	1.6	1.5	1.3	1.1										
301-500	1.7	1.5	1.3	1.2										



6.3 End Anchor Site Preparation

The site should be inspected for the presence of underground utilities prior to any excavation. The site should be prepared free of obstructing vegetation and other hazards that may interfere with the installation or operational performance of the system. Some sites may require minor grading if installed beyond the edge of the pavement shoulder.

Vehicles impacting the end of the terminals will normally continue behind and beyond the barrier and may encounter non-traversable terrain or other roadside hazards. It is recommended that the guidelines as stated in AS/NZS 3845 for the installation of gating safety barrier end terminals be observed.

AS/NZS3845 requires that a Hazard Free Zone'immediately behind the terminal... should be reasonably traversable and free from fixed object hazards. If a clear runout is not possible, this area should be similar in character to adjacent unshielded roadside areas.'

6.4 Construction of Anchor Blocks

Flexfence is available with a variety of anchor block designs. These include;

- 1. Default block Type 3 WR-STD-64
- 2. Poor soil conditions Type 1 WR-STD-62
- 3. Spacial limitations Pier WR-STD-82

The selection of a suitable design will depend upon soil type, refer anchor drawings for minimum conditions.

Typically, the alignment of the anchor block will follow the same alignment as the length of need section. If site conditions require the anchor block to be offset to the length of need section, a 200m radius can be introduced upstream from the end anchor until the desired offset angle is achieved. The fence can then be tapered at a constant rate to achieve the required offset distance.

The construction sequence is as follows;

- 1. Excavate the anchor hole in accordance with Ingal drawings.
- 2. If installing the rectangular anchor block, clip out several grids of the reomesh square to fit over the anchor bracket as shown in Ingal drawing WR-STD-62.



- 3. Attach 3 off M20 x 550mm hook bolts to the base of the anchor bracket using 2 off M20 nuts per hook bolt. One M20 nut is used either side of the anchor bracket to secure each hook bolt.
- 4. Using formwork, suspend the anchor bracket and reomesh, ensuring the anchor bracket levelling plate is at the same longitudinal grade as the roadway. The position of the anchor bracket is to be in accordance with Ingal drawings.



- 5. To prevent flotation or dislodgement during the concrete pour, drive a shortened star picket into the base or side of the excavation and use tie wire to secure the bracket.
- 6. Pour concrete into the excavation and vibrate. Ensure that the anchor bracket has remained secure.
- 7. Trowel the surface of the anchor block and shape to provide fall way from the anchor bracket.



6.5 Construction of Concrete Post Footings

- 1. Establish post spacing in accordance with expected dynamic deflections and excavate postholes to the dimensions in accordance with Table 1. Note that the height of the footing must be within 20mm of the design reference height.
- 2. Pour concrete into each hole.
- 3. Insert the post footing reinforcement ring to a depth providing 50mm of cover.





- 4. Insert the Flexfence post into the plastic HDPE sleeve.
- 5. Push the Flexfence post and the plastic HDPE sleeve into the wet concrete so that the top of the plastic sleeve is at ground level. The posts are orientated so that the smooth face is towards the traffic face.
- 6. Trowel the surface of the post footings and shape to provide a slight fall away from the post sleeve. Any doming should not exceed 20mm in height.



6.6 Driven Sleeve Post Footings

The Driven Sleeve Footings are driven directly into the ground and should be vertical. The sleeve installation process shall not cause damage to the sleeve, such that it reduces the design life, or introduces sharp edges. Refer drawing WR-STD-86.

Ensure the area has been inspected for underground hazards and services prior to installation.

Sleeves should be driven to a depth appropriate for the finished cable heights, as per drawing WRSTD-60.

6.7 Post Assembly Sequence

- 1. It is recommended that concrete used for the construction of anchor blocks and post footings be cured for a period of 7 days prior to tensioning.
- 2. Slide the ground covers over each Flexfence post.
- 3. Starting at the leading or high end of the fence, connect the bottom wire rope to the anchor using a temporary anchor connection and run out the wire

through the post slots to the far anchor and cut the rope to length. When a reel is depleted, attach the end to the next reel by tying the cables together and continue to run out the cable.

- 4. Insert the plastic spreaders into the post slots.
- 5. Repeat these procedures with subsequent wire ropes. Ensure the stainless frame is inserted between the top two ropes.
- 6. When all the ropes have been installed, fit the plastic caps to the posts.



6.8 Assembly Sequence – Flexfence TL4

The installation of Flexfence TL4 requires the addition of a rope hook be attached through the pre-punched holes in the top of the posts. Refer drawing WR-STD-60.

- 1. Prior to running out the wire, a reinforcement plate is required in each full height post. If installing a post without the pre-welded plate, a plate is dropped into the post and will come to rest within the post sleeve at the ground level.
- 2. If installing the TL4 system, ensure the post has the pre-welded stiffening plate (Figure 9). If not, please contact your local Ingal Civil representative.

Note. Ensure steel rope spreaders are used in the first full height post of the Flexfence TL3 Terminal. Refer post (k) on drawing WR-STD-050.







6.9 Installation of Tension Bays

Tension bays are located at 300m centres and not more than 150m from either anchor point, drawing WR-STD-59.

For fences less than 600m;

1. Swage the stainless steel end fittings onto all the cables and attach to the anchor bracket. The procedure for swaging is contained in the Flexfence Swaging Unit Safe Operating Procedure Manual. The bottom rope is located nearest to the approaching traffic face. Each end fitting is secured at the anchor with one washer and two nuts. If using the standard terminal, ensure safety check ropes are attached before swaging.

Note: An inspection hole is drilled into each stainless steel end fitting to ensure the wire rope cables are properly inserted into the end fittings before swaging.





2. Pull the slack out of the wire ropes toward the other anchor. This can be achieved by hand or by using a sling equipped with a lever claw clamp.



- 3. At locations where the wire rope reels have been temporarily joined, swage the end fittings onto the cables and install a tension fitting. End fittings should be positioned so that the end of the fitting is a minimum distance of 50mm from the post.
- 4. After the slack has been removed from the fence, attach the check ropes (if required), machine swage the end fittings and attach to the trailing or low-end anchor.
- 5. Identify the tension bay location(s).
- 6. Mark and cut out an 800mm section from each cable. It may be necessary to attach temporary clamps one post back from the tension bay location prior to cutting in order to prevent the cables from retracting. End fittings should be positioned so that the end of the fitting is a minimum distance of 50mm from the post.





- 7. Swage the end fittings to each cable and attach the tension fittings. The procedure for swaging is contained in the Flexfence Swaging Unit Safe Operating Procedure Manual.
- 8. Attach the tensioning rig to the bottom cable and tension from the bottom up. The procedure for Tensioning is contained in the Flexfence Tension Unit Safe Operating Procedure Manual. Each rope is tensioned in accordance with Table 4.

For fences greater than 600m

- 1. Attach the safety check ropes (if required) and machine swage the cables at the leading or high-end anchor tand attach to the anchor bracket.
- 2. Pull the slack out of the wire ropes towards the 1st tension bay location. This can be achieved by hand or by using a sling equipped with a lever claw clamp.
- 3. At the 1st tension bay location clamp the wire rope cable to a post. Repeat process for each cable, clamping each cable to a different post.
- 4. Cut the cables on the un-tensioned side of clamps and machine swage fittings. Assemble the tension fittings.
- 5. Relocate to the 2nd tension bay and repeat the above process. Continue until all the tension bays are completed.

- 6. Once the slack has been removed from the fence, attach the check ropes (if required), swage the end fittings and attach to the trailing or low-end anchor.
- 7. Once the cables are attached at the anchor bracket, relocate to the centre tension bay.
- 8. Attach the tensioning rig and tension in accordance with Table 4 from the bottom up.
- 9. Relocate from the centre bay outwards repeating the tension process.
- 10. Once complete, relocate to the centre bay and repeat tensioning in this bay only.

Note: Upon completion, the tension bays shall not be more than 90% (40mm gap) of their full extent so as to allow for further adjustment. There should also be a min 40mm exposed thread beyond each nut.

Table 3: Construction Tolerances											
Description	Recommended Tolerance										
Rope Height	-10mm /+30 mm										
Post Spacing	± 30mm										
Post Footing Dimensions	- 10mm										
Anchor Block Dimensions	- 20mm										
Cable Tension	- 1kN / +2kN										

Table 4: Tension Unit	Pressure Requirer	ments
Ambient Temperature °C	TL3 System (Bar)	TL4 System (Bar)
-5	(24kN) 263	(36kN) 386
0	(23kN) 247	(34kN) 363
5	(21kN) 231	(32kN) 340
10	(20kN) 215	(29kN) 316
15	(18kN) 200	(27kN) 293
20	(17kN) 184	(25kN) 270
25	(16kN) 168	(23kN) 247
30	(14kN) 152	(21kN) 224
35	(13kN) 137	(19kN) 201
40	(11kN) 121	(17kN) 177

6.10 Clean-up and Waste Materials

Recycle, reuse or dispose of all surplus material, rubbish and other debris in accordance with the requirements of the local state based environmental protection specification.





7.0 Flexfence Maintenance

Flexfence is a low maintenance roadside safety barrier. Except for repairs due to impacts, there is virtually no maintenance required for the system. It is recommended that regular drive-by inspections be performed to ensure the following;

- 1. Post caps have not dislodged. Delineation stickers are attached to the post caps and a loss of numerous caps could result in poor delineation.
- 2. Debris has not accumulated around the system. A clear zone, free of hazards should exist immediately behind the fence to accommodate for the expected dynamic deflection.
- 3. Safety check ropes should be secured to the anchor Standard Terminal only. Refer WR-STD-55.
- 4. Ropes have not dislodged from the posts as a result of minor impacts.

7.1 Cable Tension

Flexfence is supplied with pre-stretched wire rope. The pre-stretching process removes the constructional stretch in the wires as they 'bed-down'. Wire rope is essentially an elastic member and will not require retensioning after most impacts. For fences subjected to regular vehicle impacts or large seasonal temperature variations, it may be necessary to evaluate the rope tension annually. This can be undertaken using the Flexfence Tension Unit.

7.2 Bush Fire Damage 1

The performance of galvanized coatings when subjected to bushfire depends on a number of factors, such as flame duration, intensity and the characteristics of the galvanized coating and the technology with which it is applied.

Typical bushfire conditions may expose steel structures to air temperature of 800°C for periods of up to 120 seconds, however zinc coatings are generally reflective and will not absorb heat at the same rate as an uncoated steel surface. Depending on the section thickness of the steel, the actual steel surface temperatures may not exceed 350°C.

Typically, the bushfire flame duration and intensity are not high enough to compromise the structural strength of the steel. The hot dip galvanized coating will thus remain largely unaffected through a bushfire event. If the bushfire causes damage to the galvanized surface, then the item(s) shall be replaced.

7.3 Damage Assessment

In the event of a vehicle impact, damage to the barrier is to be assessed in accordance with Table 5. In the event that the ropes are to be cut, they are NOT to be cut under tension.

A Safe Work Method Statement is available upon request to assist in the safe repair of Flexfence.


¹ Information based upon testing conducted on behalf of BlueScope Steel by the CSIRO Manufacturing and Infrastructure Technology Bushfire CRC in 2005.


Tab	ما	5.	n	am	20	ا ۵	١cc	مدد	m	on'	+
าสม	ıe	Э:	v	am	ay	e ,	155	ess	ш	en	ι


Type of Defect	Description of the Defect	Action to be Taken				
Galvanizing damage on Posts.	The sum total of the damaged or uncoated areas does not exceed 10cm ² (0.5% of the total surface area).	An organic zinc rich epoxy paint is to be applied to the repair areas in two coats.				
	The sum total of the damaged or uncoated areas exceeds $10\mathrm{cm^2}$ (0.5% of the total surface area).	The post is to be replaced.				
Galvanizing Damage on Wire Rope Cable	The wire rope is nicked or gouged to less than 10% depth. The wire rope is nicked or gouged greater than 10% depth.	An organic zinc rich epoxy paint is to applied to the repair areas in two coats.				
		The wire rope section is to be replaced.				
Mechanical Damage	Any rope length containing more than 1 broken wire.	The rope section is to be replaced.				
on Wire Rope Cable (Refer drawing	Any rope where the diameter is reduced by more than 10% by abrasion.	The rope section is to be replaced				
WR-STD-59 on page 14)	Any rope which has been crushed or flattened by more than 10% of its nominal diameter.	The rope section is to be replaced.				
Mechanical damage on Posts.	The post is distorted.	The post is to be replaced.				
Damaged End Fitting	There is damage to the thread of the fitting, however tension can be maintained in the wire rope system without relying on the fitting.	There is no requirement for immediate replacement. The location of the fitting should be noted and scheduled for replacement during routine maintenance.				
	There is damage to the thread of the fitting and tension cannot be maintained in the wire rope system without relying on the fitting.	The fitting is to be replaced.				
	The fitting is cracked.	The fitting is to be replaced.				
	The body of the fitting is distorted.	The fitting is to be replaced.				
Damaged Tension	The fitting is cracked.	The fitting is to be replaced.				
Fitting	The body of the fitting is distorted.	The fitting is to be replaced.				




Flexfence Tensioning Report And Checklist		
Customer:		
Project:		
Fence ID:		
Fence Length:		
Ambient Temperature:		
Tensioning Force:		
Checked By:		
Signed:		
Date		
End Anchors		
Is the anchor block dimensions in accordance with Ingal drawings	Yes	No
Has the anchor bracket been installed with the levelling plate at the same longitudinal grade as the roadway	Yes	No
Have safety check ropes been attached to the cables (drawing WR-STD-55 only)	Yes	No
Have the safety check ropes been attached to the anchor bracket (drawing WR-STD-55 only)	Yes	No
Has each end fitting been secured with one washer and two nuts	Yes	No
Post Fittings		
Have the posts been installed at the correct spacing	Yes	No
Have the posts been installed with the correct orientation towards approaching traffic	Yes	No
Have ground covers been attached to the posts	Yes	No
Have plastic spacers been inserted between each cable	Yes	No
Has the stainless frame been inserted between the top and second from top cable	Yes	No
Have post caps been attached to the posts	Yes	No
Has delineation been attached to the post caps	Yes	No
Post Fittings – TL4 System Only		
Have rope hooks been attached to each post along the length of need section	Yes	No
Tension Bays		
Have tension bays been installed at not more than 150m from the end anchors	Yes	No
Have tension Bays been installed at not more than 300m apart	Yes	No

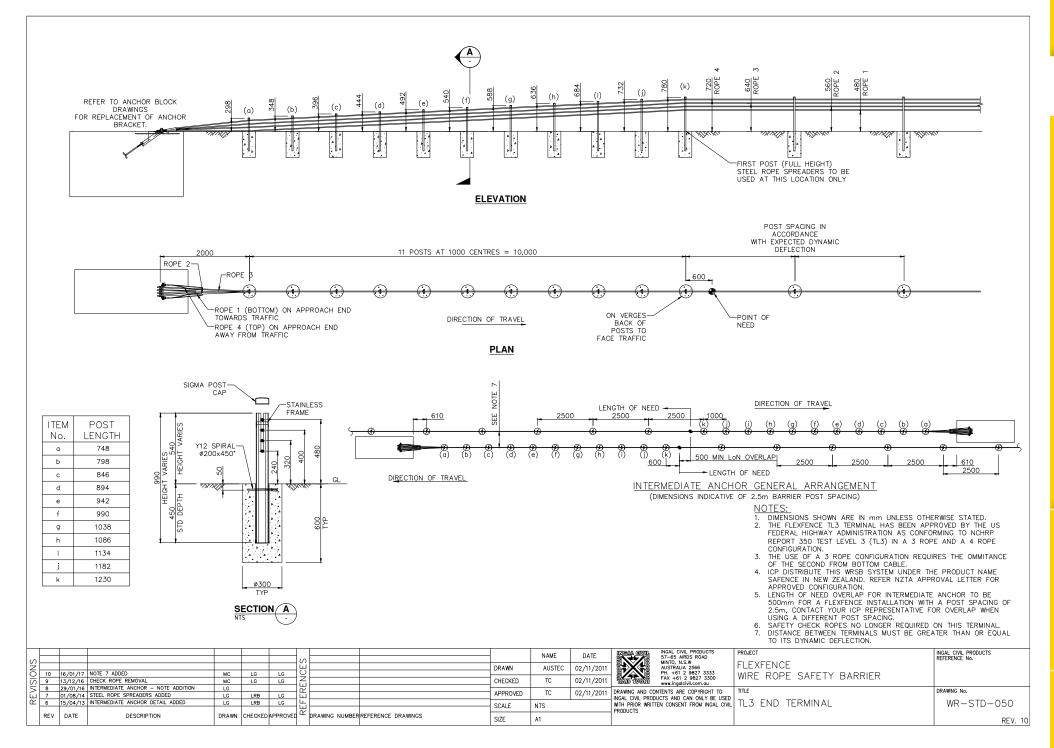

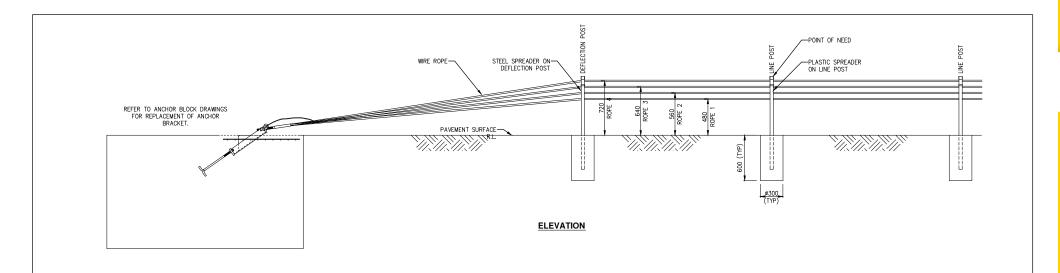

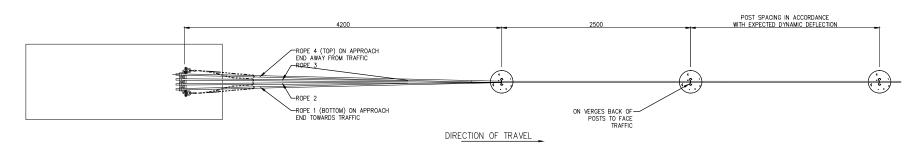

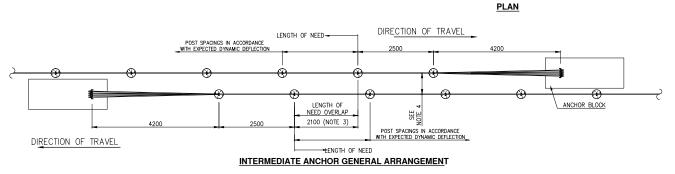

Use of this terminal is limited to locations where geometric constraints limit use of TL3 Terminal. Please contact your local ICP representative for further advice prior to design or installation. Approval may be required from road controlling authority.

- NOTES:


 1. DIMENSIONS SHOWN ARE IN mm UNLESS OTHERWISE STATED.


 2. ICP DISTRIBUTE THIS WRSB SYSTEM UNDER THE PRODUCT NAME SAFENCE IN NEW ZEALAND. REFER NZTA APPROVAL LETTER FOR APPROVED
- NZTA APPROVAL LETTER FOR APPROVED CONFIGURATION.

 3. LENGTH OF NEED OVERLAP FOR INTERMEDIATE ANCHOR TO BE 2100mm FOR A FLEXFENCE INSTALLATION WITH A POST SPACING OF 2.5m, CONTACT YOUR ICP REPRESENTATIVE FOR OVERLAP WHEN USING A DIFFERENT POST SPACING.

 4. DISTANCE BETWEEN TERMINALS MUST BE GREATER
- THAN OR EQUAL TO ITS DYNAMIC DEFLECTION.

	_															
	8	16-01-17	NOTE 4 ADDED	MC	LG	LG	ļ				NAME	DATE	DOWNE GOVOR	INGAL CIVIL PRODUCTS	PROJECT	INGAL CIVIL PRODUCTS
	7	08-04-13	INTERMEDIATE CROSS-OVER ANCHOR DETAIL ADDED	LG	LRB	LG]()[NAME	DATE		57-65 AIRDS ROAD MINTO, N.S.W		PART No.
10	6	08/02/13	SAFENCE NOTE ADDED	LG	SE	LRB] [[DRAWN	AUSTEC	2-11-2011		AUSTRALIA 2566	FLEXFENCE WIRE ROPE SAFETY BARRIER	
ΙZ	5	02/11/11	1 TITLE BLOCK UPDATED	DJB	TC	TC]2!				7100120	2 11 2011		PH. +61 2 9827 3333	TEE/A ENGE WINE NOTE O/A ETT B/ACCIEN	
- ⊆	4	08/02/10	DETAILS UPDATED	MS	TC	TC	122			CHECKED	TC	2-11-2011		FAX +61 2 9827 3300 www.ingalcivil.com.au		
-16	3	24/04/0	TITLE AMENDED	XX	TC	TC] [5]							INTENTS ARE COPYRIGHT TO	TITLE	DRAWING No.
16	2	09/02/0	NOTES AND TITLE AMENDED	AJP	TC	TC	167			APPROVED	IC.	2-11-2011		OUCTS AND CAN ONLY BE USED		DIAMINO NO.
0	1	26/06/0	NITIAL ISSUE	AJP	TC	TC	교			SCALE	N.T.S. @			TEN CONSENT FROM INGAL CIVIL		
- [1 /			OUNEL	14.1.0. @	nu	PRODUCTS		4-KUPE CUNFIGURATION	WR-STD-55
	REV	DATE	DESCRIPTION	DRAWN	CHECKED	APPROVED	4 1	DRAWING NUMBER	REFERENCE DRAWINGS	ISSUE FOR	PRODU	CTION				D 0

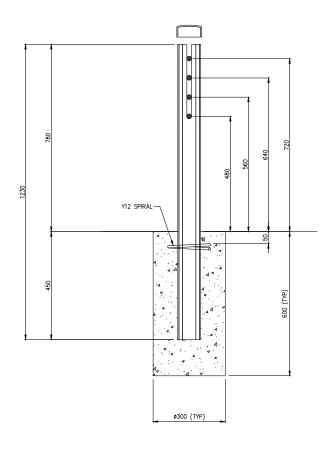

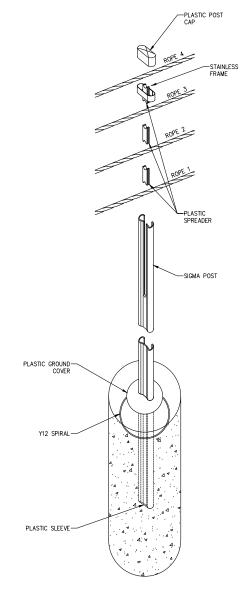

- NOTES:

 1. THE IMPACT CONDITIONS ARE DESCRIBED AS FOLLOWS: O) TL3 REFERS TO NOHRP REPORT 350 TEST LEVEL 3.
 THIS IS AN IMPACT WITH A 2,000KG PICK-UP TRUCK
 TRAVELING AT 100KM/H AND 25 DEGREES.

 N 2R REFERS TO EN1317 CONTAINMENT LEVEL N2. THIS IS
 AN IMPACT WITH A 1,500KG VEHICLE TRAVELING AT 110KM/H AND 20 DEGREES. C) H1 REFERS TO EN1317 CONTAINMENT LEVEL H1. THIS IS AN IMPACT WITH A 10,000KG RIGID TRUCK TRAVELING AT 70KM/H AND 15 DEGREES.

 2. THE DYNAMIC DEFLECTION VALUES SHOULD NOT BE CONSIDERED AN EXACT DISTANCE, BUT RATHER AS A SINGLE POINT WITHOUT THE PANCE OF DEFLECTIONS THAT
- SINGLE POINT WITHIN THE RANGE OF DEFLECTIONS THAT CAN BE EXPECTED.
- 3. STATE ROAD AUTHORITY SPECIFICATIONS SHOULD BE REFERENCED TO OBTAIN APPROVED POST SPACINGS AND RELEVANT MULTIPLYING FACTORS FOR INSTALLATIONS ON CURVES AND/OR VARIATIONS IN BARRIER LENGTHS (IF
- CURVES AND/OR VARIATIONS IN BARRIER LENGTHS (IF REQUIRED).

 4. SIZES OF CONCRETE POST FOOTINGS ARE DEPENDANT UPON LOCAL GROUND CONDITIONS. REFER TO FLEXFENCE PRODUCT MANUAL FOR FOOTING SIZE OPTIONS.

 5. DIMENSIONS SHOWN ARE IN MILLIMETERS UNLESS OTHERWISE SPECIFIED.
- 6. NOMINAL ROPE TENSION AT 20°C IS 17kN

	DYNAMIC DEFLECTION (M)						
POST SPACING (M)	N2	TL3	H1				
2.0	1.0	1.9	2.0				
2.5	1.3	2.2	2.5				
3.0	1.6	2.5	3.0				

												NAME	DATE
	- 1	6		NOTE 6 ADDED	LG	TO		ES					
	S			TITLE BLOCK UPDATED NOTES AMENDED	DJB MS	TC	TC TC	19			DRAWN	AUSTEC	2/11/2011
	VISION			TITLE AMENDED	MS	TC	TC	鼠			CHECKED	TC	2/11/2011
	ङ।			TITLE AMENDED	AJP	TC		뚭					
- 1 1	ш			NOTES AND TITLE AMENDED	AJP	TC	TC	1出			APPROVED	TC	2/11/2011
	œ	0	06/07/06	INITIAL ISSUE	AJP	TC	TC	2			SCALE	NTS	
	REV DATE		DATE	DESCRIPTION	DRAWN	CHECKED	ADDROVED		DRAWING NUMBER	REFERENCE DRAWINGS			
	KE	INC.	DAIL	DESCRIPTION	DIVANIA	GILCKED	AI I KOVED		DIAMINO NOMBER	RELECTIVE BILATINGS	SIZE	A1	



INGAL CIVIL PRODUCTS 57-65 AIRDS ROAD MINTO, N.S.W AUSTRALIA 2566 PH. +61 2 9827 3333 FAX +61 2 9827 3300

D11 DRAWING AND CONTENTS ARE COPYRIGHT TO MICAL CIVIL PRODUCTS AND CAN ONLY BE USED WITH PRIOR WRITTEN CONSENT FROM INGAL CIVIL PRODUCTS


REQUIRED.


PROJECT				
FLEXFENCE	WIRE	ROPE	SAFETY	BARRIER

ARRANGEMENT

DRAWING No. WR-STD-57

REV. 6

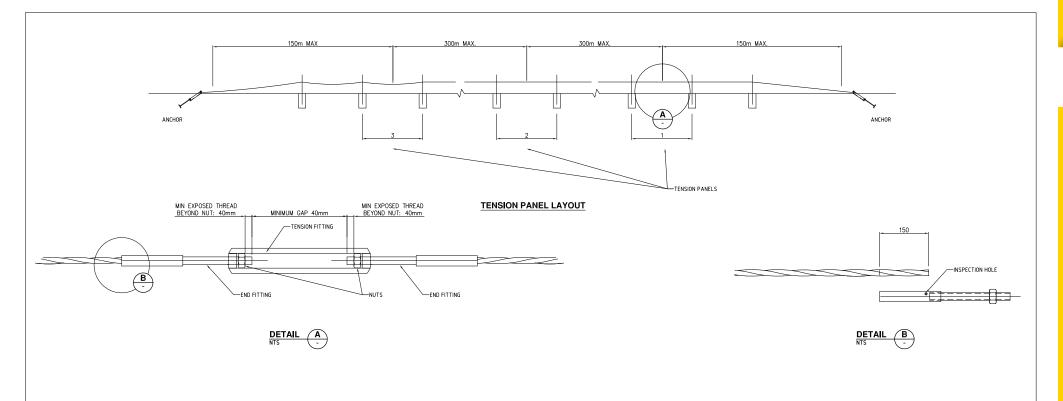

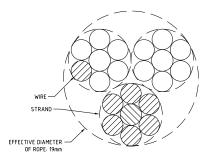


CROSS-SECTION OF ROPE 7 WIRES PER STRAND 3 STRANDS PER ROPE

											NAME	DATE	IXEAL GIVIL	INGAL CIVIL PRODUCTS	PROJECT
							S				INAME	DAIL		57-65 AIRDS ROAD MINTO, N.S.W	FLEXFE
S	6	09-08-2018	DIMS ADDED TO DETAIL A	VB	LG	LG	18			DRAWN	AUSTEC	2/11/2011	8%\X*\	AUSTRALIA 2566	
Z	5	22-09-2017	ROPE SECTION ADDED	MC	LG	LG	Ž							PH. +61 2 9827 3333	
SION	4	08/02/13	NOTES ADDED	LG	SE	LRB	띪			CHECKED	TC	2/11/2011	TIME TVOID	FAX +61 2 9827 3300 www.ingalcivil.com.au	
18	3	02/11/11	TITLE BLOCK UPDATED	DJB	TC	TC	Į.				TO	0 /44 /0044	DRAWING AND COM	NTENTS ARE COPYRIGHT TO	TITLE
	2	25/02/10	TITLE BLOCK UPDATED	MS	TC	TC	16			APPROVED	10	2/11/2011	INCAL CIVIL PRODI	JCTS AND CAN ONLY BE USED	TENSIC
R	1	13/07/06	INITIAL ISSUE	AJP	TC	TC	碇			SCALE	NTS			EN CONSENT FROM INGAL CIVIL	LEMPIC
							1			JUALL	NIS		PRODUCTS		
	REV	DATE	DESCRIPTION	DRAWN	CHECKED	APPROVED		DRAWING NUMBER	REFERENCE DRAWINGS	SIZE	A1				
										JILL	171				

NOTES:

1. ALL MEASUREMENTS ARE IN mm UNLESS STATED OTHERWISE.

DATE	INGAL CIVIL PRODUCTS 57-65 AIRDS ROAD MINTO, N.S.W	PROJECT FLEXFENCE WIRE ROPE SAFETY BARRIER	INGAL CIVIL PRODUCTS REFERENCE No.
2/11/2011	AUSTRALIA 2566 PH. +61 2 9827 3333	THE ROLL SALETT BANKINEK	
2/11/2011	TUME TWOKE FAX +61 2 9827 3300 www.ingalcivil.com.au		
2/11/2011	DRAWING AND CONTENTS ARE COPYRIGHT TO	TITLE	DRAWING No.
=,, =	INGAL CIVIL PRODUCTS AND CAN ONLY BE USED	TENSION PANEL ARRANGEMENT	
	WITH PRIOR WRITTEN CONSENT FROM INGAL CIVIL	TENSION TANLE ANNANGEMENT	WR-STD-59
	PRODUCTS		
			REV. 6

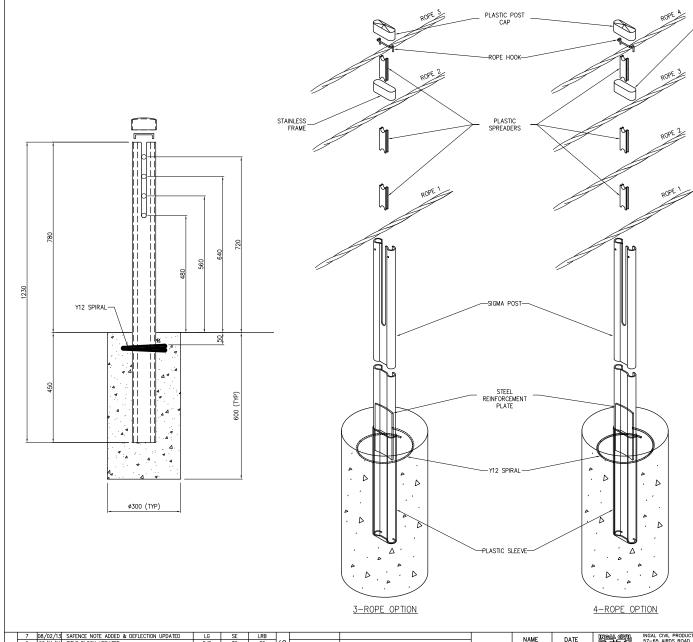

STAINLESS FRAME


- NOTES:


 1. THE IMPACT CONDITIONS ARE DESCRIBED AS FOLLOWS;
- a) TL3 REFERS TO NCHRP REPORT 350 TEST LEVEL 3. THIS IS AN IMPACT WITH A 2,000KG PICK-UP TRUCK TRAVELING AT 100KM/H AND 25 DEGREES.
- b) TL4 REFERS TO NCHRP REPORT 350 TEST LEVEL 4. THIS IS AN IMPACT WITH AN 8,000KG RIGID TRUCK TRAVELING AT 80KM/H AND 15 DEGREES. FLEXFENCE TL4 HAS BEEN APPROVED BY THE US FEDERAL HIGHWAY ADMINISTRATION AS A 3 ROPE OR 4 ROPE BARRIER.
- BARKIEN.
 2. THE DYNAMIC DEFLECTION VALUES SHOULD NOT BE CONSIDERED AN EXACT DISTANCE, BUT RATHER AS A SINGLE POINT WITHIN THE RANGE OF DEFLECTIONS THAT CAN BE EXPECTED.
- 3. STATE ROAD AUTHORITY SPECIFICATIONS SHOULD BE REFERENCED TO OBTAIN APPROVED POST SPACINGS AND RELEVANT MULTIPLYING FACTORS FOR INSTALLATIONS ON CURVES AND/OR VARIATIONS IN BARRIER LENGTHS (IF REQUIRED).
- 4. SIZES OF CONCRETE POST FOOTINGS ARE DEPENDANT UPON LOCAL GROUND CONDITIONS. REFER TO FLEXFENCE PRODUCT MANUAL FOR
- FOOTING SIZE OPTIONS.
 5. DIMENSIONS SHOWN ARE IN MILLIMETERS UNLESS
- DIMENSIONS SHOWN ARE IN MILLIMETERS ONLESS OTHERWISE SPECIFIED
 ICP DISTRIBUTE THIS WRSB SYSTEM UNDER THE PRODUCT NAME SAFENCE IN NEW ZEALAND. REFER NZTA APPROVAL LETTER FOR APPROVED


	DYNAMIC DEF	FLECTION (M)
POST SPACING (M)	TL3*	TL4*
2.0	1.3	1.1
2.5	1.4	1.2
3.0	1.6	1.3

* CABLE TENSION SET TO 25kN

	- 00	10/02/13	SAFENCE NOTE ADDED & DEFLECTION UPDATED	LG	SE	LKB					NAME	DATE	INGONE GIANT	INGAL CIVIL PRODUCTS 57-65 AIRDS ROAD	PROJECT		INGAL CIVIL PRODUCTS
6	0:	02/11/11	TITLE BLOCK UPDATED	DJB	TC	TC	그었				ITAME	DAIL		MINTO, N.S.W	FLEXEENCE	WIRE ROPE SAFETY BARRIER	REFERENCE No.
\sigma \sigma 5	04	4/05/10	NOTES AMENDED	MS	TC	TC	JEI			DRAWN	AUSTEC	2/11/2011		AUSTRALIA 2566	I LLM LIVOL	MINE TOTE STREET BANKEL	
Z 4	90	8/02/10	NOTES AMENDED	MS	TC	TC]2.[PH. +61 2 9827 3333			
	28	8/07/09	TITLE AMENDED	MS	TC	TC	밁띴			CHECKED	TC	2/11/2011		FAX +61 2 9827 3300 www.ingalcivil.com.au			
€ 2	24	4/04/07	TITLE AMENDED	AJP	TC	TC] 🖽 [TC	0 /11 /0011	-	ONTENTS ARE COPYRIGHT TO	TITLE		DRAWING No.
	09		NOTES AND TITLE AMENDED	AJP	TC	TC]出[APPROVED	10	2/11/2011	INCAL CIVIL PRO	OUCTS AND CAN ONLY BE USED	TI A DOCT A	ADD ANOTHERIT	
O 0	06	6/07/06	INITIAL ISSUE	AJP	TC	TC] ॡ [SCALE	NTS		WITH PRIOR WRIT	TEN CONSENT FROM INGAL CIVIL	IL4 PUST A	ARRANGEMENT	WR-STD-60
							1 [SCALE	NIS		PRODUCTS	TEN CONCENT THOM STORE CITE			
REV	v	DATE	DESCRIPTION	DRAWN	CHECKED	APPROVED	4 1	DRAWING NUMBER	REFERENCE DRAWINGS	SIZE	A1						251.7
										SIZL	A)						REV. 7

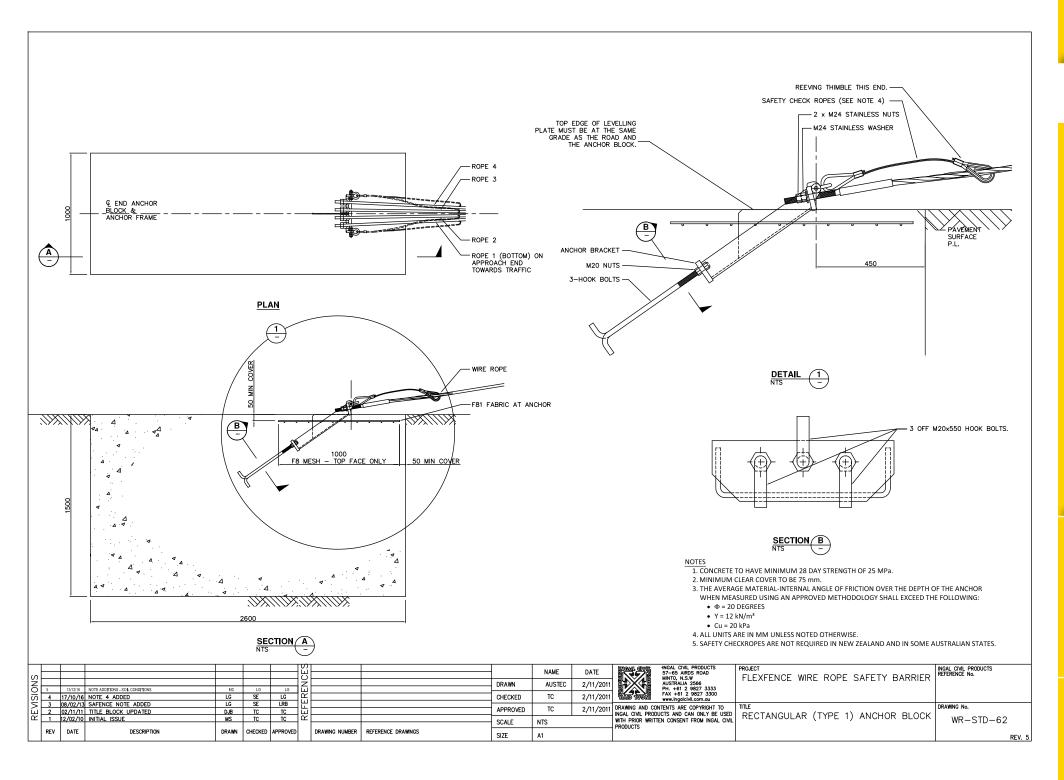

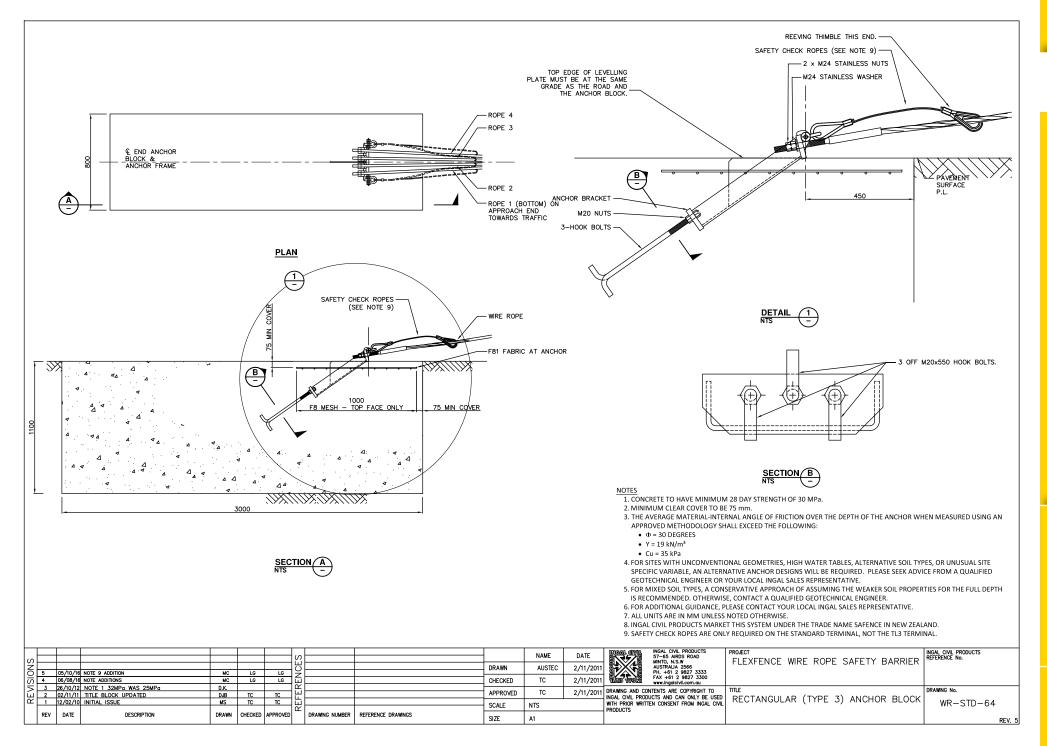

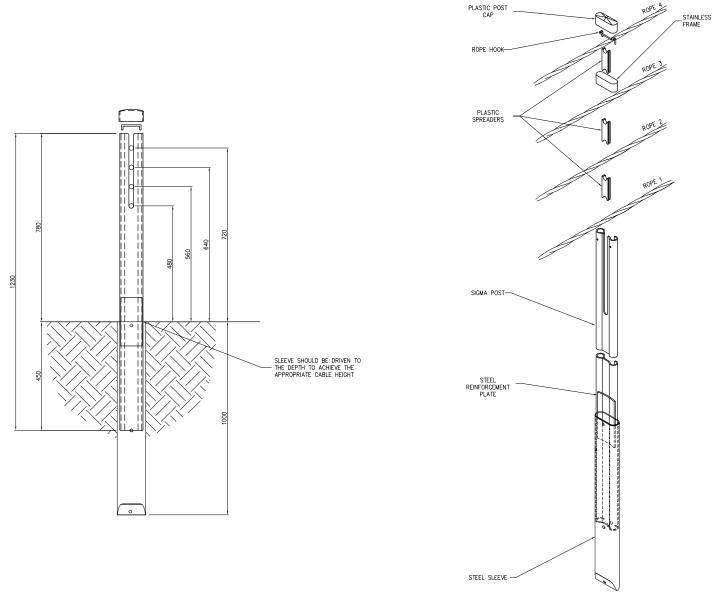

- NOTES:

 1. THE IMPACT CONDITIONS ARE DESCRIBED AS FOLLOWS;

 THE IMPACT CONDITIONS ARE DESCRIBED AS FOLLOWS;
 - a) TL3 REFERS TO NCHRP REPORT 350 TEST LEVEL 3. THIS IS AN IMPACT WITH A 2,000KG PICK-UP TRUCK TRAVELING AT 100KM/H AND 25°. b) TL4 REFERS TO NCHRP REPORT 350 TEST LEVEL 4. THIS IS AN IMPACT
 - WITH AN 8,000KG RIGID TRUCK TRAVELING AT 80KM/H AND 15°. FLEXFENCE TL4 HAS BEEN APPROVED BY THE US FEDERAL HIGHWAY ADMINISTRATION AS A 3 ROPE OR 4 ROPE BARRIER.
- THE DYNAMIC DEFLECTION VALUES SHOULD NOT BE CONSIDERED AN EXACT DISTANCE, BUT RATHER AS A SINGLE POINT WITHIN THE RANGE OF DEFLECTIONS THAT CAN BE EXPECTED.
- STATE ROAD AUTHORITY SPECIFICATIONS SHOULD BE REFERENCED TO OBTAIN APPROVED POST SPACINGS AND RELEVANT MULTIPLYING FACTORS FOR INSTALLATIONS ON CURVES AND/OR VARIATIONS IN BARRIER LENGTHS (IF REQUIRED).
- 4. DIMENSIONS SHOWN ARE IN MILLIMETERS UNLESS OTHERWISE SPECIFIED
- 5. ICP DISTRIBUTE THIS WRSB SYSTEM UNDER THE PRODUCT NAME SAFENCE IN NEW ZEALAND. REFER NZTA APPROVAL LETTER FOR APPROVED CONFIGURATION.
- CABLE TENSION 25kN @ 20°C AMBIENT AIR TEMP.
- SOIL TO MEET OR EXCEED THE REQUIREMENTS FOR AASHTO STANDARD SOIL OR RMS-R44 VERGE MATERIAL (Min CBR 15%, PLASTICITY INDEX; ≥ 6 AND ≤12.

L														
								S				NAME	DATE	
9	⊋Ε							길			DRAWN	MC	12-12-2015	
200								문			CHECKED	LG	12-12-2015	
15	3		15-05-2017	NOTE ADDITIONS	MC	LG	LG	щ			10000150			
Ιú	1 2		14-03-2017	NOTE ADDITIONS	LG			115			APPROVED			
0	2 1		22-06-2016	SLEEVE EXTENDED TO 1000mm	LG			~			SCALE	NTS		
								1			SCALE	NIS		
	RI	REV	DATE	DATE	DESCRIPTION	DRAWN	CHECKED	APPROVED		DRAWING NUMBER	REFERENCE DRAWINGS	SIZE	A1	
								_						

INGAL CIVIL PRODUCTS 57-65 AIRDS ROAD MINTO, N.S.W AUSTRALIA 2566 PH. +61 2 9827 3333 FAX +61 2 9827 3300 www.ingalcivil.com.au


DRAWING AND CONTENTS ARE COPYRIGHT TO NOAL CIVIL, PRODUCTS AND CAN ONLY BE USED THE WITH PRIOR WRITTEN CONSENT FROM INGAL CIVIL PRODUCTS

FLEXFENCE WIRE ROPE SAFETY BARRIER

WR-STD-86

INGAL CIVIL PRODUCTS REFERENCE No.

DRAWING No.

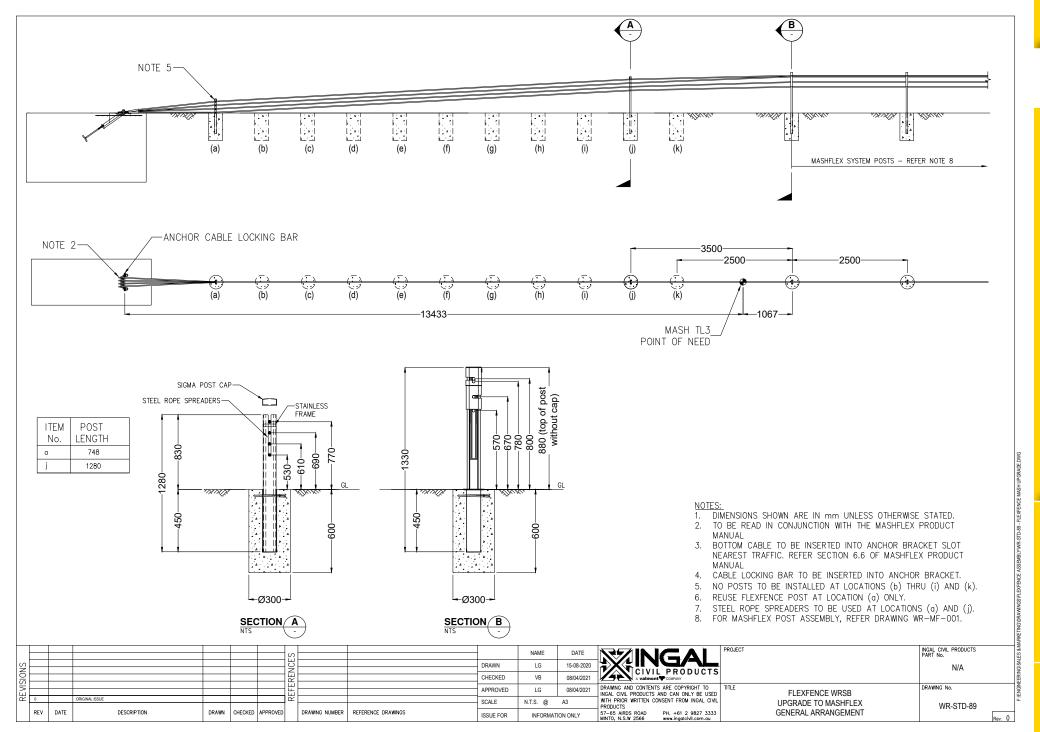





For more information

contact us on the web

www.ingalcivil.com.au

Head Office: Sydney

57-65 Airds Road, Minto, NSW 2566

Ph: +61 2 9827 3333 Fax: +61 2 9827 3300 Local call (within Australia):

1300 446 425

Email: sales@ingalcivil.com.au

Our Locations:

- Adelaide Brisbane
- Melbourne Newcastle
- Perth Sydney Wagga
- Auckland Christchurch