


## How to Install the Carsonite<sup>®</sup> Retrofit Enhancer

**CAUTION:** Always wear proper safety equipment. Read instructions completely before installation.

### For New Posts

1. Slide the Enhancer over the end of the post and adjust it to the desired height.  
*See Figure 1.*
2. Drill through post and Enhancer with a 3/16" drill bit.
3. Push the thumb rivet through the Enhancer and the post, as shown. *See Figure 2.*
4. Repeat drill and thumb rivet on opposite side.

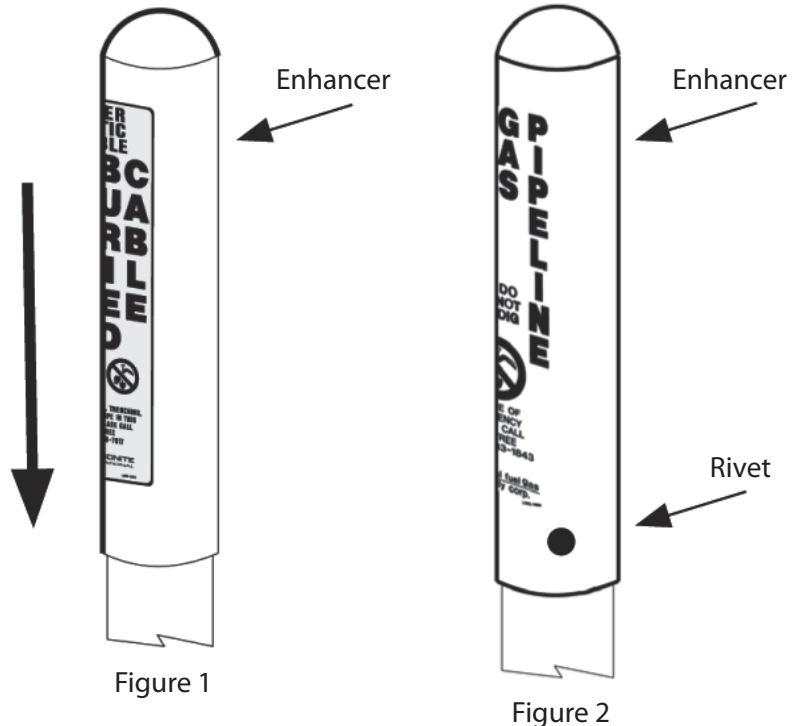

### To Replace Enhancers (Retrofit)

1. Remove the locking rivets and remove the old Enhancer tube from the post.
2. Slide the new Visibility Enhancer over the end of the post and adjust it to the desired height. *See Figure 1.*
3. Drill through post and Enhancer with a 3/16" drill bit.
4. Push the thumb rivet through the Enhancer and the post, as shown. *See Figure 2.*
5. Repeat drill and thumb rivet on opposite side.